# SCHEDULED MAINTENANCE

## **Service Schedules**

Maintenance services and record retention are the owner's responsibility. You should retain evidence that proper maintenance has been performed on your vehicle in accordance with the scheduled maintenance services chart. *For vehicles with normal annual mileage.* 

MAINTENANCE	Kilometers or time in months/years, whichever comes first											
INTERVAL	Month/1000	Months/5000	r/10000	rs/20000	rs/30000	Years/40000	rs/50000	Years/60000	Years/70000	ears/80000	rs/90000	ars/100000
ITEM	Mo		Year	Years/2	Years	· ·	Year		Yea	×	Yea	0 Ye
ENGINE CONTROL SYSTEM	1	9	-	7	e	4	ŝ	9	7	×	6	=
Drive Belt (Alternator, Power Steering and A/C Compressor)	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Engine Oil and Engine Oil Filter (1) (3)	Ι	Ι	R	R	R	R	R	R	R	R	R	R
Cooling System and Hose Connections	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Engine Coolant (3)	Ι	Ι	Ι	Ι	Ι	Ι	R	Ι	Ι	Ι	Ι	R
Fuel Filter	Ι	Ι	Ι	Ι	R	Ι	Ι	R	Ι	Ι	R	Ι
Fuel Line and Connections	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Air Cleaner Element (2)	Ι	Ι	Ι	R	Ι	R	Ι	R	Ι	R	Ι	R
Spark Plugs	Ι	Ι	Ι	Ι	R	Ι	Ι	R	Ι	Ι	R	Ι
Spark Plug Wires	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
EVAP Canister, Vapor Lines & Solenoid Valve Filter				Ι		Ι		Ι		Ι		Ι
PCV System				Ι		Ι		Ι		Ι		Ι

#### Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

(1) If a vehicle is operated under severe conditions: short distance driving, extensive idling or driving in dusty conditions, change engine oil and the filter every 5,000 kms or 6 months, whichever comes first.

(2) Inspect the air cleaner element every 5,000 kms or 6 months if vehicle is driven under dusty driving conditions. If necessary correct, clean or replace.

(3) Refer to "FLUID CHART" on page 142.

MAINTENANCE	MAINTENANCE Kilometers or time in months/years, whichever comes first											
INTERVAL MAINTENANCE ITEM	1 Month/1000	6 Months/5000	1 Year/10000	2 Years/20000	3 Years/30000	4 Years/40000	5 Years/50000	6 Years/60000	7 Years/70000	8 Years/80000	9 Years/90000	10 Years/100000
CHASSIS AND BODY												
Exhaust Pipe & Mountings	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Brake Fluid (3) (4)	Ι	Ι	Ι	R	Ι	R	Ι	R	Ι	R	Ι	R
Front Brake Discs & Pads (5)	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Rear Brake Drums & Linings (5)	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Parking Brake	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Brake Line & Connections (Including Booster)	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Manual Transaxle Fluid (3)	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Chassis & Underbody Bolts & Nuts Tight / Secure	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι

For vehicles with normal annual mileage.

#### **Chart Symbols:**

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

- (3) Refer to "FLUID CHART" on page 142.
- (4) Change the brake fluid every 10,000 kms or 1 years (whichever is earlier) if the vehicle is mainly driven under severe conditions:
  - Driving in hilly or mountainous terrain, or
  - Towing a trailer frequently.

(5) More frequent maintenance is required if under severe condition: frequent low-speed operation in stop-and go traffic or driving in dusty conditions.

### For vehicles with normal annual mileage.

MAINTENANCE	Kilometers or time in months/years, whichever comes first											
INTERVAL MAINTENANCE ITEM	1 Month/1000	6 Months/5000	1 Year/10000	2 Years/20000	3 Years/30000	4 Years/40000	5 Years/50000	6 Years/60000	7 Years/70000	8 Years/80000	9 Years/90000	10 Years/100000
CHASSIS AND BODY												
Tire Condition, Inflation Pressure & Rotation	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Wheel Alignment (6)	As and when required or as suggested by CHEVROLET retailer											
Wheel Balancing (6)		As	and wh	nen requ	uired or	as sug	gested 1	by CHE	VROL	ET reta	iler	
Steering Wheel & Linkage	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Power Steering Fluid & Lines	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Drive Shaft Boots	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Safety Belts, Buckles & Anchorages	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Lubricate Locks, Hinges & Hood Latch	L	L	L	L	L	L	L	L	L	L	L	L
A/C Mesh Filter	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι

### **Chart Symbols:**

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

(6) If necessary, rotate and balance wheels.