

Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL:	x 1,000 km																			
(Use odometer reading or months, whichever comes first)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
*Engine oil	R		R		R		R		R		R		R		R		R		R	
*Engine oil filter	R		R		R		R		R		R		R		R		R		R	
Oil leakage and contamination	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Idling speed and acceleration	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Fan belt	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Power steering / AC belt	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
*Exhaust pipe and mountings	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
All hose and pipes in engine compartment for clog or damage		I		I		I		I		I		I		I		I		I		I
Valve clearance				A				A				A				A				A
*Air cleaner element	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I	I	I	I
Fuel filters			R			R			R			R			R			R		
Fuel line and connections	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine coolant	I	I	I	I	I	I	I	I	I	R		I		I		I		I		R
Cooling system for water leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
CLUTCH																				
Clutch fluid	I	I	I	I	I	R	I	I	I	I	I	R	I	I	I	I	I	R	I	I
Clutch pedal travel and play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

* Under severe conditions, additional maintenance is required.

Refer to "Maintenance schedule under severe conditions"

Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL:	x 1,000 km																			
(Use odometer reading or months, whichever comes first)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
TRANSMISSION																				
*Manual transmission oil		R			I			R				I				R				I
Oil Leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Gear control mechanism for looseness				I				I					I				I			I
PROPELLER SHAFT																				
Loose connection		I		I		I		I		I		I		I		I		I		I
*Universal joints and splines for wear		I		I		I		I		I		I		I		I		I		I
*Universal joints and sliding sleeve		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
REAR AXLE																				
*Differential gear oil		R			I			R				I				R				I
Oil leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Axle case for distortion or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

* Under severe conditions, additional maintenance is required
 Refer to "Maintenance schedule under severe conditions"

Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL: x 1,000 km	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	
(Use odometer reading or months, whichever comes first)	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
STEERING																					
Steering gear oil - Manual						R						R						R			
[PS] Power steering fluid	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	R	I	I	I
Oil leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
*Steering system for looseness or damage		I		I		I		I		I		I		I		I		I		I	
[PS] Power steering hose		I		I		I		I		I		I		I		I		I		I	
Steering wheel play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Joint ball for leakage or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

* Under severe conditions, additional maintenance is required
 Refer to "Maintenance schedule under severe conditions"

Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL: x 1,000 km	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	
(Use odometer reading or months, whichever comes first)	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
SERVICE BRAKES																					
Brake fluid	I	I	I	I	I	R	I	I	I	I	I	R	I	I	I	I	I	R	I	I	
Brake system for fluid leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Brake function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
* Front disc brake pads and discs wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
* Rear brake lining and drum wear		I		I		I		I		I		I		I		I		I		I	
Brake pedal travel and play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Pipes and hoses for loose connections or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
PARKING BRAKE																					
Parking brake function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Parking brake lever travel	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Cables for looseness or damage and guide for damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Ratchet for wear or damage		I		I		I		I		I		I		I		I		I		I	

* Under severe conditions, additional maintenance is required

Refer to "Maintenance schedule under severe conditions"

Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL:	x 1,000 km		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
(Use odometer reading or months, whichever comes first)	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120		
SUSPENSION																						
Leaf spring for damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Mount for looseness or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Shock Absorbers for oil leakage		I		I		I		I		I		I		I		I		I		I		I
Shock Absorbers mount for looseness		I		I		I		I		I		I		I		I		I		I		I
Rubber bushes of suspension for wear or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Joint ball rubber boot for damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
WHEELS																						
Wheels nuts	T	T		T		T		T		T		T		T		T		T		T		T
Wheels disc for damage	I	I		I		I		I		I		I		I		I		I		I		I
Hub bearing grease						R								R						R		
Front and rear hub bearings for looseness		I		I		I		I		I		I		I		I		I		I		I
Spare wheel hanger	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Tyre pressure and damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Tyre Rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Wheel Alignment and Wheel Balancing	As and when required or as suggested by CHEVROLET retailer																					
OTHERS																						
Bolts and nuts chassis and body	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Safety belts, buckles & anchorages	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Lubricate locks, hinges, hood latch & fuel flap release	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

* Under severe conditions, additional maintenance is required Refer to "Maintenance schedule under severe conditions"